


Clockwise Rotation
Starter/Generator

Jumper From A1 To F1
A2 Is Ground
F2 Is Solenoid Connection

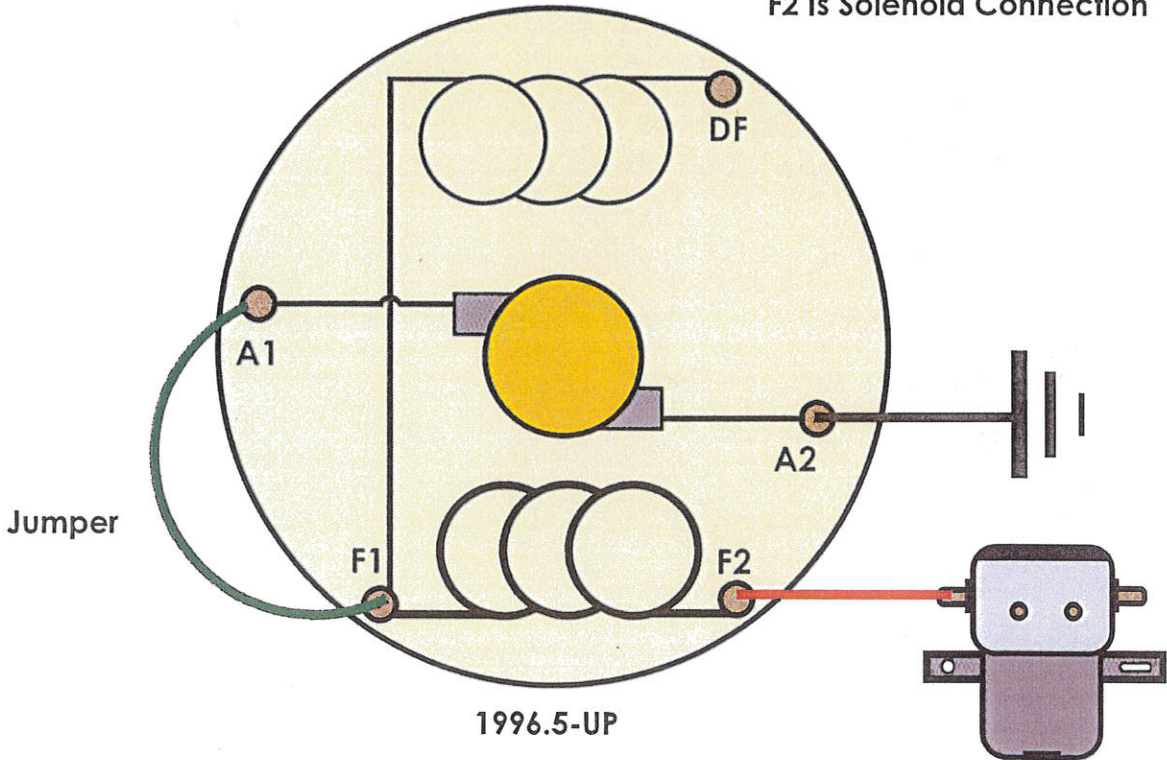

Counterclockwise Rotation
Starter/Generator

Jumper From A2
To F1
A1 Is Ground
F2 Is Solenoid
Connection

