



03-083

TRAILER HITCH

WILL FIT E-Z-GO® RXV®

INSTALLATION INSTRUCTIONS

INCLUDED:

Trailer Hitch
Hardware Pack

TOOLS NEEDED:

17mm Socket
17mm Wrench
14mm Socket
14mm Wrench
Power Drill
7/16" Drill Bit



Trailer Hitch

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

Switch key to OFF position and set parking brake.

1



Locate the center mounting hole.


2



3
Attach trailer hitch using center bolt. Be sure hitched aligned parallel with cart. Leave Loose.




4
Using a 7/16" drill bit, drill through trailer outer trailer hitch holes into cart as shown.

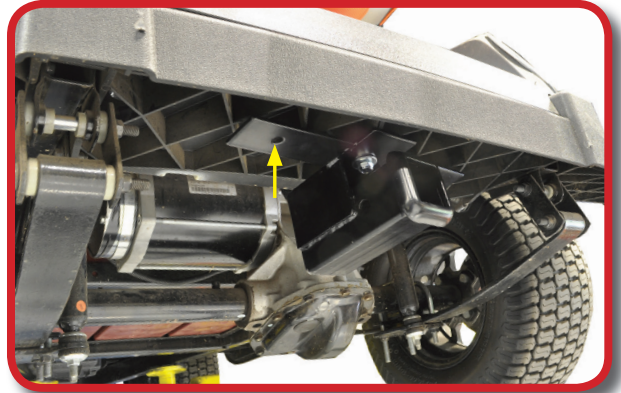

5
Insert hardware through bagwell into trailer hitch as shown.



6
Tighten all hardware.

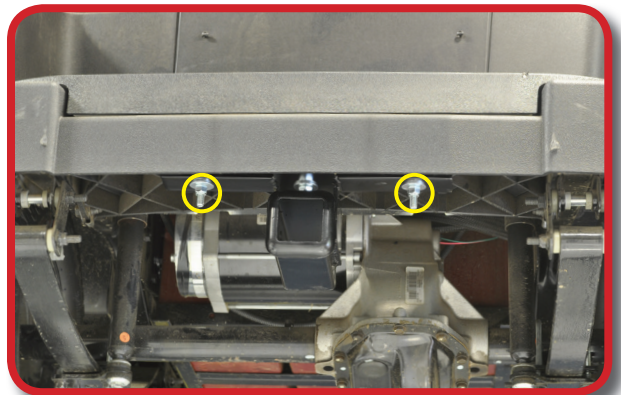

INSTALLATION COMPLETE

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this GTW product is compatible. GTW products are aftermarket parts and are not original equipment parts. GTW is not connected or affiliated with or sponsored by Textron® or E-Z-GO®.