



03-106  
**FENDER FLARES**  
will fit YAMAHA® DRIVE® G29®  
Installation Instructions

Included:



Fender Flares



Hardware Pack (16)

**We recommend professional installation.** If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your car's body.

**Note:** Located inside the fender flare is the location (abbreviated) for each.  
Ex: FL= Front Left (Driver side left)

- A) Test fit fender flare to bodywork to determine best placement.
- B) Front point of flare should be flush with body as shown.
- C) Rear should curve under side skirt as shown.

Driver Front



## Driver Front

A




A) Holding the fender flare in place, mark locations to be drilled.

B



B) Using a 1/8" bit, drill pilot holes at the marked locations. Ensure area behind body work is clear to avoid potential damage to wiring.

C

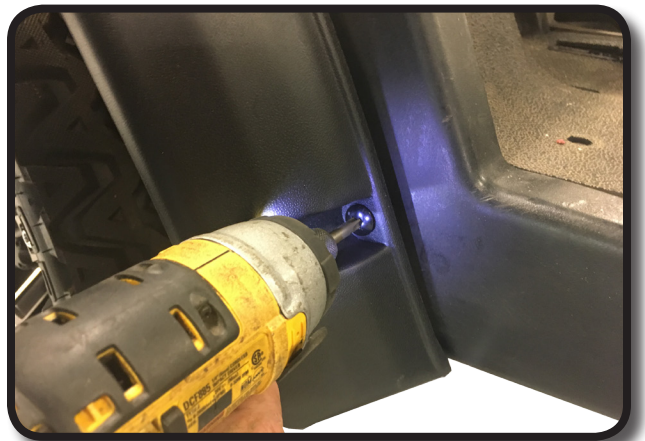

C) Using a #3 Phillips tip, secure fender flare to body using supplied screws.

Driver Rear



A

- A) Test fit fender flare to bodywork to determine best placement. Front of flare should curve under side skirt.
- B) Holding the fender flare in place, mark locations to be drilled.



B



Driver Rear



Using a 1/8" bit, drill pilot holes at the marked locations. Ensure area behind body work is clear to avoid potential damage to wiring.

Using a #3 Phillips tip, secure fender flare to body using supplied screws.

**\*\*\*Repeat Steps 1-5 for passenger side side.**

## INSTALLATION COMPLETE